

## Spectralink S33 Handset

### Quick Start Guide



**Note:** If a menu, submenu, setting or a function is not visible, it is controlled by a local administrator. Contact them if a change is needed.

Charge your handset for 8 hours prior to first use for best performance.

#### Turning Handset On

- Press to turn the handset on.

#### Turning Handset Off

1. Hold until the question “Turn off?” appears in the display.
2. Press to confirm.

#### Adjusting Speaker/Headset Volume

- While on call, press the **Volume Control** keys on the upper left side of the handset to adjust the volume.

#### Adjusting Ring Volume

1. Press to enter the main menu.
2. Scroll to **Audio** and press .
3. Scroll to **Ring Volume** and press .
4. Press the **left or right side of the navigation key** to adjust the volume of the ring tone.
5. Press to save your changes.

#### Changing Ring Tone

1. Press to enter the main menu.
2. Scroll to **Audio** and press .
3. Scroll to **Ring Tone** and press .
4. Scroll to the desired ring tone and press the **right side of the navigation key** to listen to the ring tone.
5. Press the **left side of the navigation key** to listen to the internal calls ring tone.
6. Scroll to the desired ring tone, and press to select the new ring tone.

#### Off Hook Dialing (Dial Directly)

1. Press .
2. Dial number.
3. Press to end the call.

#### On Hook Dialing (Pre-Dial)

1. Dial number.
2. Press to initiate the call.
3. Press to end the call.

#### Speed Dial Calls

- Press and hold a key (0-9) for three seconds, until the call is initiated.

#### Answering and Ending Calls

- To answer a call, press .
- To end a call, press .

#### Call List Calls


1. Press the **left side of the navigation key** to enter the **Call List**.
2. Scroll to the desired name or number, and press .

#### Call Missed Calls

1. Press the **right side of the navigation key** to enter the **Missed Call List**.
2. Scroll to the desired name or number, and press .

#### Phone Book Calls (Local)

1. Press the **bottom of the navigation key** to enter the local phonebook.
2. Scroll to the desired name, and press to make a call.

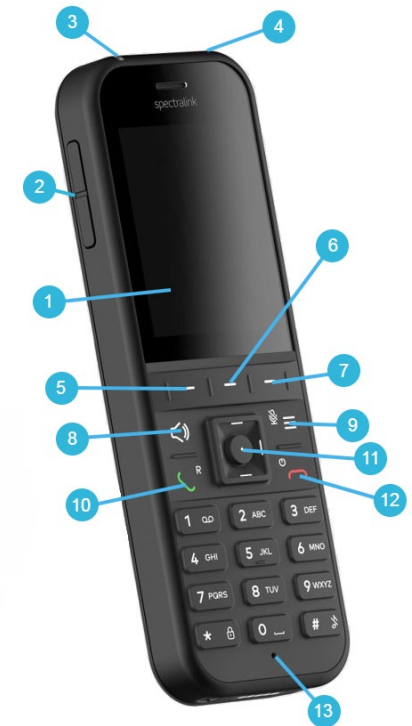

- 1 Display
- 2 Volume Control
- 3 LED
- 4 Headset Connector
- 5 Left Softkey
- 6 Middle Softkey
- 7 Right Softkey
- 8 Loudspeaker Key
- 9 Mute/Menu Key
- 10 Off Hook Key
- 11 Four Way Navigation Key
- 12 On Hook Key
- 13 Microphone

### Company Phone Book Calls

1. While on hook, press the **top of the navigation key** to enter the company phonebook.
2. Search for a name, press **✓**, then scroll to the desired number and press **Dial** or **↩**.

### Adding a New Contact to Contacts

1. Press **≡** to enter the main menu.
2. Scroll to **Contacts** and press **✓**.
3. Scroll to **Local Contacts** and press **✓**.
4. Scroll to **Add name/number** and press **✓**.
5. Type the name of the contact using the keys 0-9.
6. Scroll to number and enter the directory number/SIP extension of the contact (max. 24 digits/64 characters). Before entering a SIP URI, press and hold **#** until **SIP:** is shown.
7. Press **↓** to store the name and directory number/SIP extension.

### Assigning Speed Dials

1. Press **≡** to enter the main menu.
2. Scroll to **Contacts** and press **✓**.
3. Scroll to **Speed Dial** and press **✓**.
4. Scroll to the desired speed dial position and press **⊕**. If the position is occupied, press **✓** to replace the existing speed dial.
5. If more than one number, scroll to the desired number and press **✓**.

### Locking/Unlocking Keypad

- Press **≡** followed by the \* button to lock or unlock the keypad.

### Silent Mode On/Off

- Press **≡** followed by the # button to turn the handset silent mode on/off. In silent mode there is no sound for incoming calls and notifications.

### Exit Menus

- To exit menus and return to the home screen, press **↩**.

### Loudspeaker On/Off

- While in a call, press **↶** to enable or disable the loudspeaker.

### Microphone Mute On/Off

- While in a call, press **🔇** to mute the microphone. To unmute the call, press **🔇**.
- Alternatively, while in a call, press **≡** to mute/unmute the call.

### Handset Icons

- Missed calls
- Incoming calls
- Battery charging (in charger)
- Battery charging (handset turned on in charger)
- Battery capacity decreasing (handset out of charger)
- Battery capacity low
- Message received
- Keypad or screen locked
- Silent mode
- Appears when loudspeaker is turned on
- Microphone muted

### Technical Specifications

#### Battery and Handset Capacity

- Removable and replaceable 1200mAh battery
- Active talking time up to 16 hours.
- Standby time up to 140 hours.
- Charge time under 4 hours

#### Durability / Ruggedness

- IP54 water and dust resistance.
- Exceeds MIL-STD-810H drop tests.
- Atmospheric resistance tested – salt and fog.
- Health-grade plastic material withstands daily disinfectant cleaning and UV-C lamps.
- Resistant to abrasion (RCA Abrasion tested).

#### Environmental

- Operating temperature range: -10° to 55°C / 14° to 131°F.
- Charging temperature range: 0° to 43°C / 32° to 109°F.
- Storage temperature range: -40° to 70°C / -40° to 158°F.

© 2013 - 2023 Spectralink Corporation All rights reserved. Specifications subject to change without notice.

<u>US Location</u>	<u>Denmark Location</u>
Spectralink Corporation	Spectralink Europe ApS
2560 55th Street	Bygholm Søpark 21 E Stuen
Boulder, CO 80301	8700 Horsens
USA	Denmark
<a href="mailto:info@spectralink.com">info@spectralink.com</a>	<a href="mailto:infoemea@spectralink.com">infoemea@spectralink.com</a>
<a href="http://www.spectralink.com">www.spectralink.com</a>	